

# UG229: Si51211/Si51218 Evaluation Board User's Guide


The Si51211/Si51218 evaluation boards (the Si5121x-EVB) can be used to emulate custom Si5121x part numbers as below:

Base Part Number	EVB
Si51210/14	Si51211 EVB
Si51211	
Si51218	Si51218 EVB

**EVB FEATURES**

- Powered from USB port
- Onboard Si514 to generate any input clock based on the frequency plan
- CBPro™ GUI programmable  $V_{DD}$  supply allows device at 3.3 V or 2.5 V

The Si5121x-EVB has an on-board programmable Si514 that generates the input clock frequency and can demonstrate function of up to two dc input pins and one output clock or up to three output clocks from the Si5121x part, depending on the part emulated and the frequency plan.

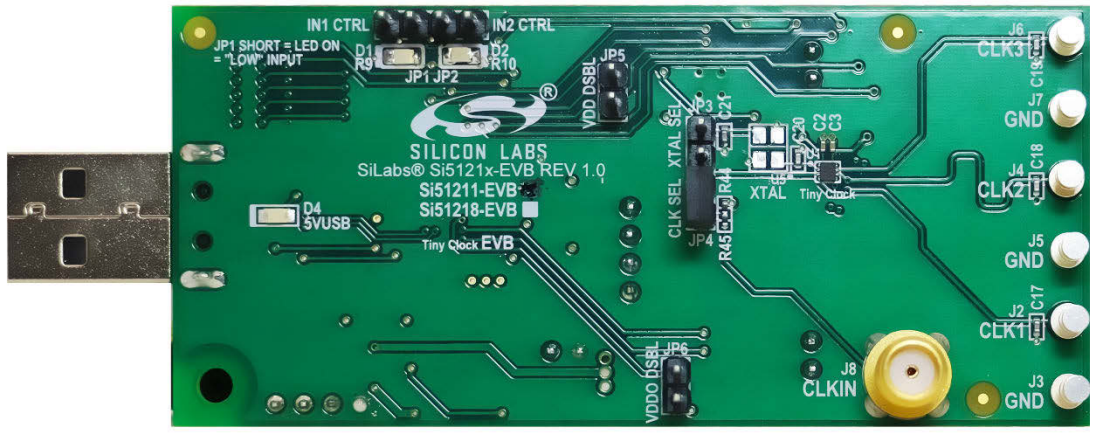

## 1. Identifying the EVB Part

Look for the “check” on one of the two boxes for either the Si51211-EVB or the Si51218-EVB as shown in [Figure 1.1 Si5121x-EVB Identification on page 2](#). Other than this check box selection (and the Si5121x device used in the EVB), the EVBs are both identical by design. Therefore, the user guide to the EVBs is a common document. CBPro™ also has the ability to identify the EVBs and displays the EVB type as shown in [Figure 1.2 Si5121x-EVB Identification by CBPro on page 2](#).



Figure 1.1. Si5121x-EVB Identification

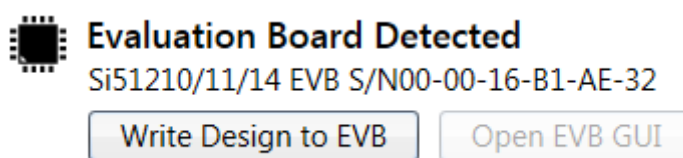


Figure 1.2. Si5121x-EVB Identification by CBPro

## 2. Functional Block Diagram

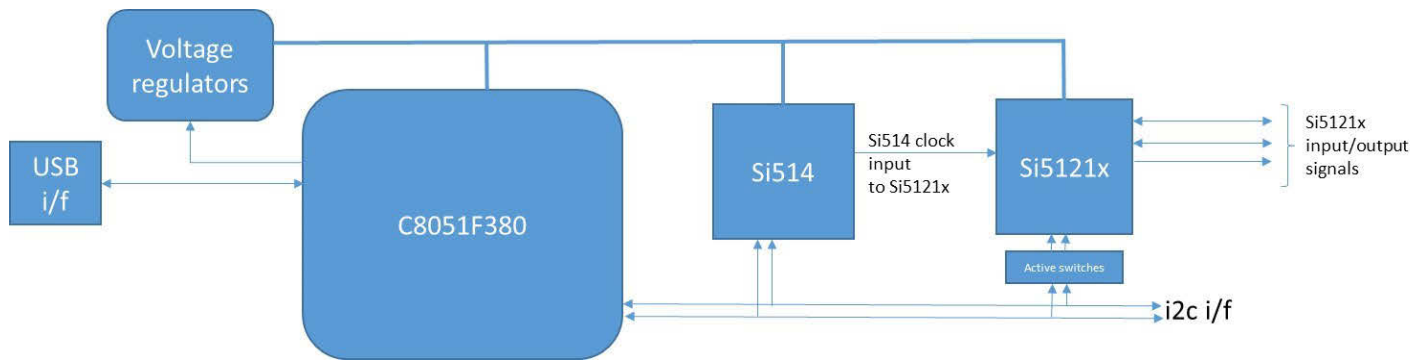


Figure 2.1. Si5121x- CEVB Functional Block Diagram

The C8051F380 MCU is used to control the Si514, Si5121x devices, and the voltage regulators and implement the plans created on CBPro.

### 3. Installing ClockBuilderPro (CBPro) Desktop Software

To install the CBPro software on any Windows 7 or above PC, go to [www.silabs.com/CBPro](http://www.silabs.com/CBPro) and download the CBPro software. Installation instructions and a User's Guide for CBPro can be found at the download link shown above. Follow the instructions as indicated.

## 4. Using the Si5121x EVB

### 4.1 Connecting to a Si5121x EVB using CBPro

Once CBPro software is installed, connect to the EVB with a USB cable as shown in the figure below:



Figure 4.1. Connecting to Si5121x EVB via CBPro

## 4.2 Programming the Si5121x EVB using CBPro

There are three ways to select (or arrive at) a frequency plan on the CBPro software. They are as follows:

1. Selecting a "default plan" from CBPro.
2. Creating a plan using the CBPro wizard.
3. Opening an existing plan stored as a CBPro project file.

At the end of any of these three steps, the starting point to programming the EVB will be as shown in the following figures:

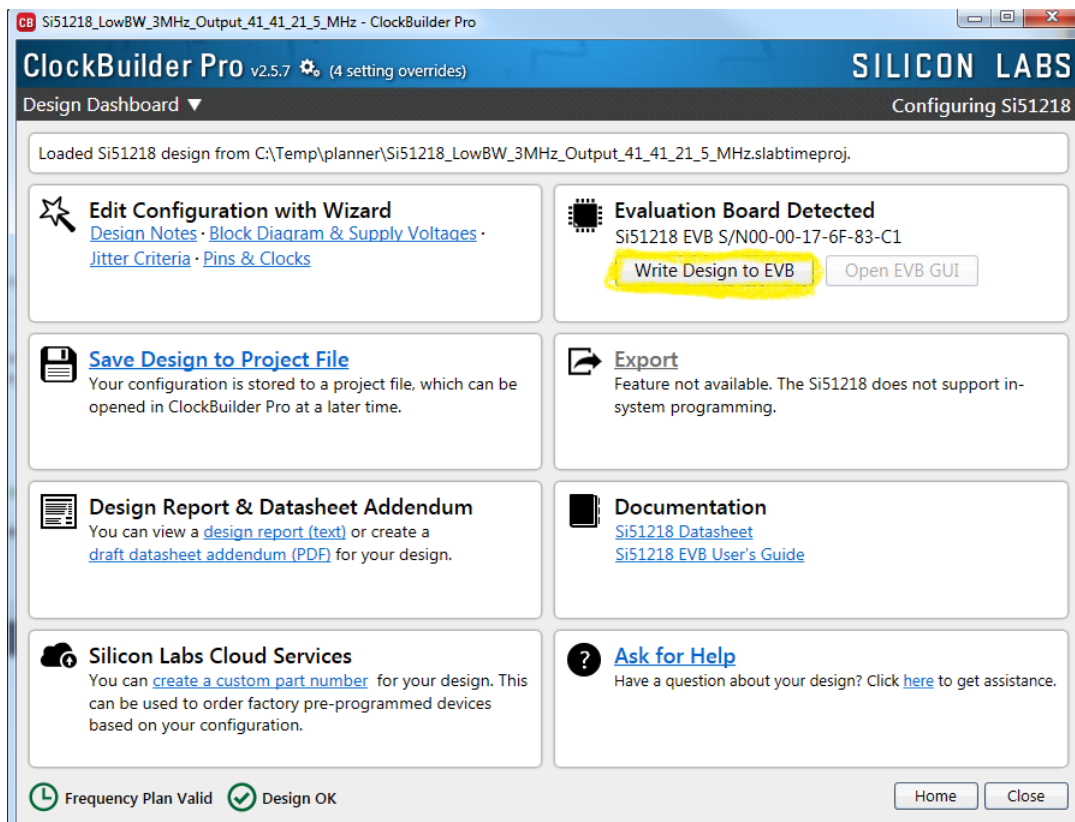


Figure 4.2. Starting Screen for EVB Write

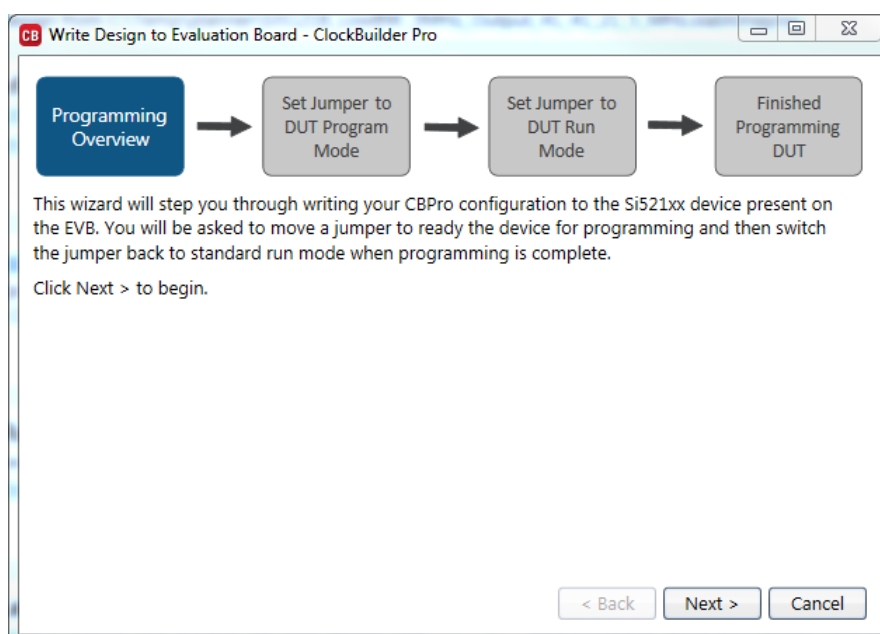


Figure 4.3. Step 1 of 4 in EVB Write

Click "Next" to get to the next window.

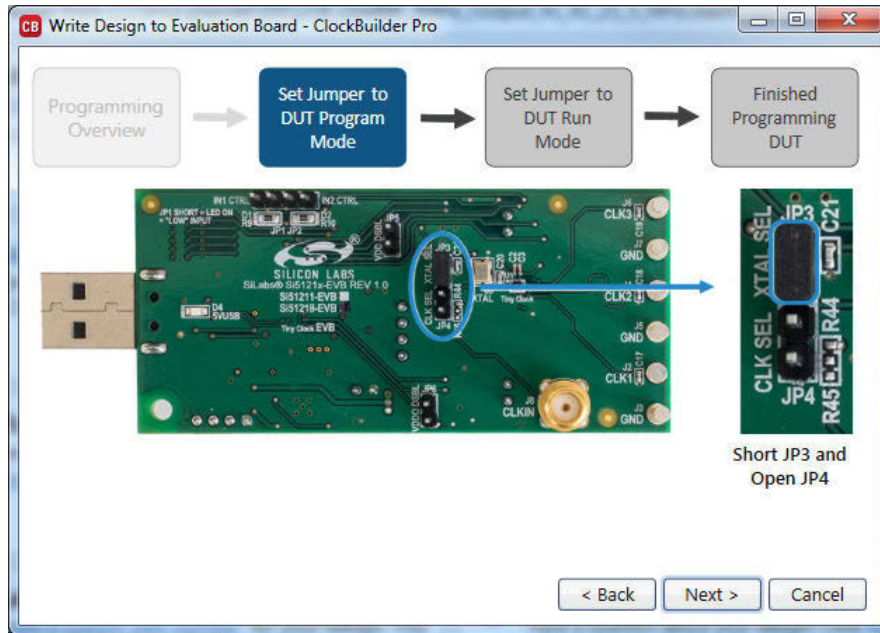


Figure 4.4. Step 2 of 4 in EVB Write

Now, ensure that the jumper JP3 is shorted and jumper JP4 is open. Then click "Next" to get to the window in [Figure 4.5 Step 3 of 4 in EVB Write on page 7](#).

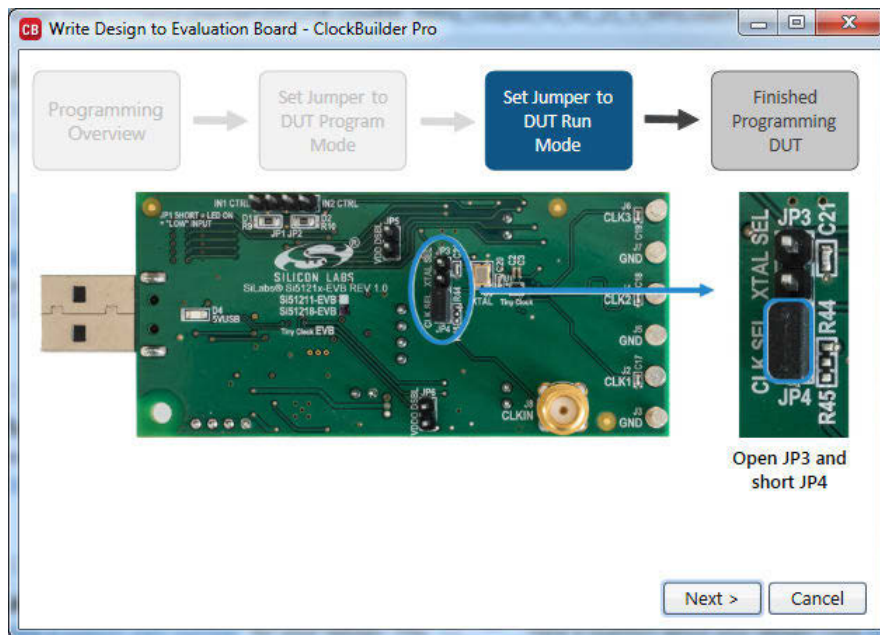
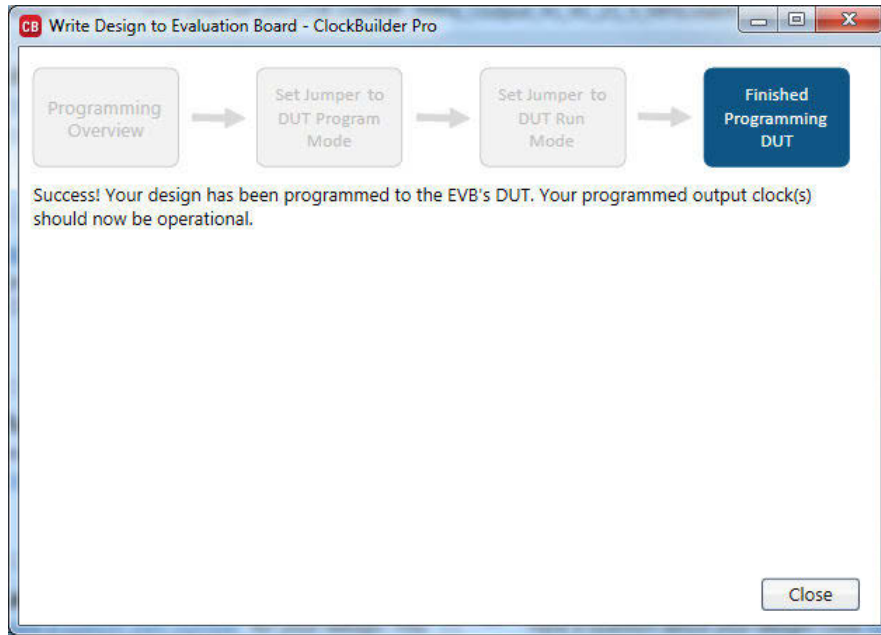


Figure 4.5. Step 3 of 4 in EVB Write

Next, ensure that the jumper JP4 is shorted and jumper JP3 is open. Then click "Next" to get to the window in [Figure 4.6 Step 4 of 4 in EVB Write on page 8](#).



**Figure 4.6. Step 4 of 4 in EVB Write**

This step completes the programming. The plan can be evaluated now.



## 5. Controlling Input Pins

The input pin (IN1 or IN2) will be:

- High when the pin is left open, such as the IN2 setting in the figure below, or
- Low when the pin is shorted using an INx\_CTRL jumper, such as the IN1 setting in the figure below.



Figure 5.1. Input Pin Control

## 6. Bill of Materials (BOM), Layout, and Schematic

The Si5121x EVB Bill of Materials (BOM), Layout, and Schematic design files can be found online at: <http://www.silabs.com/si512xx>.

**Note:** Please be aware the Si5121x EVB schematic is in OrCad Capture hierarchical format and not in a typical “flat” schematic format.

## 7. Revision History

### Revision 0.2


February 2021

- Updated link to design files in section 6. [Bill of Materials \(BOM\), Layout, and Schematic](#).

### Revision 0.1

April 20, 2016

- Initial release.

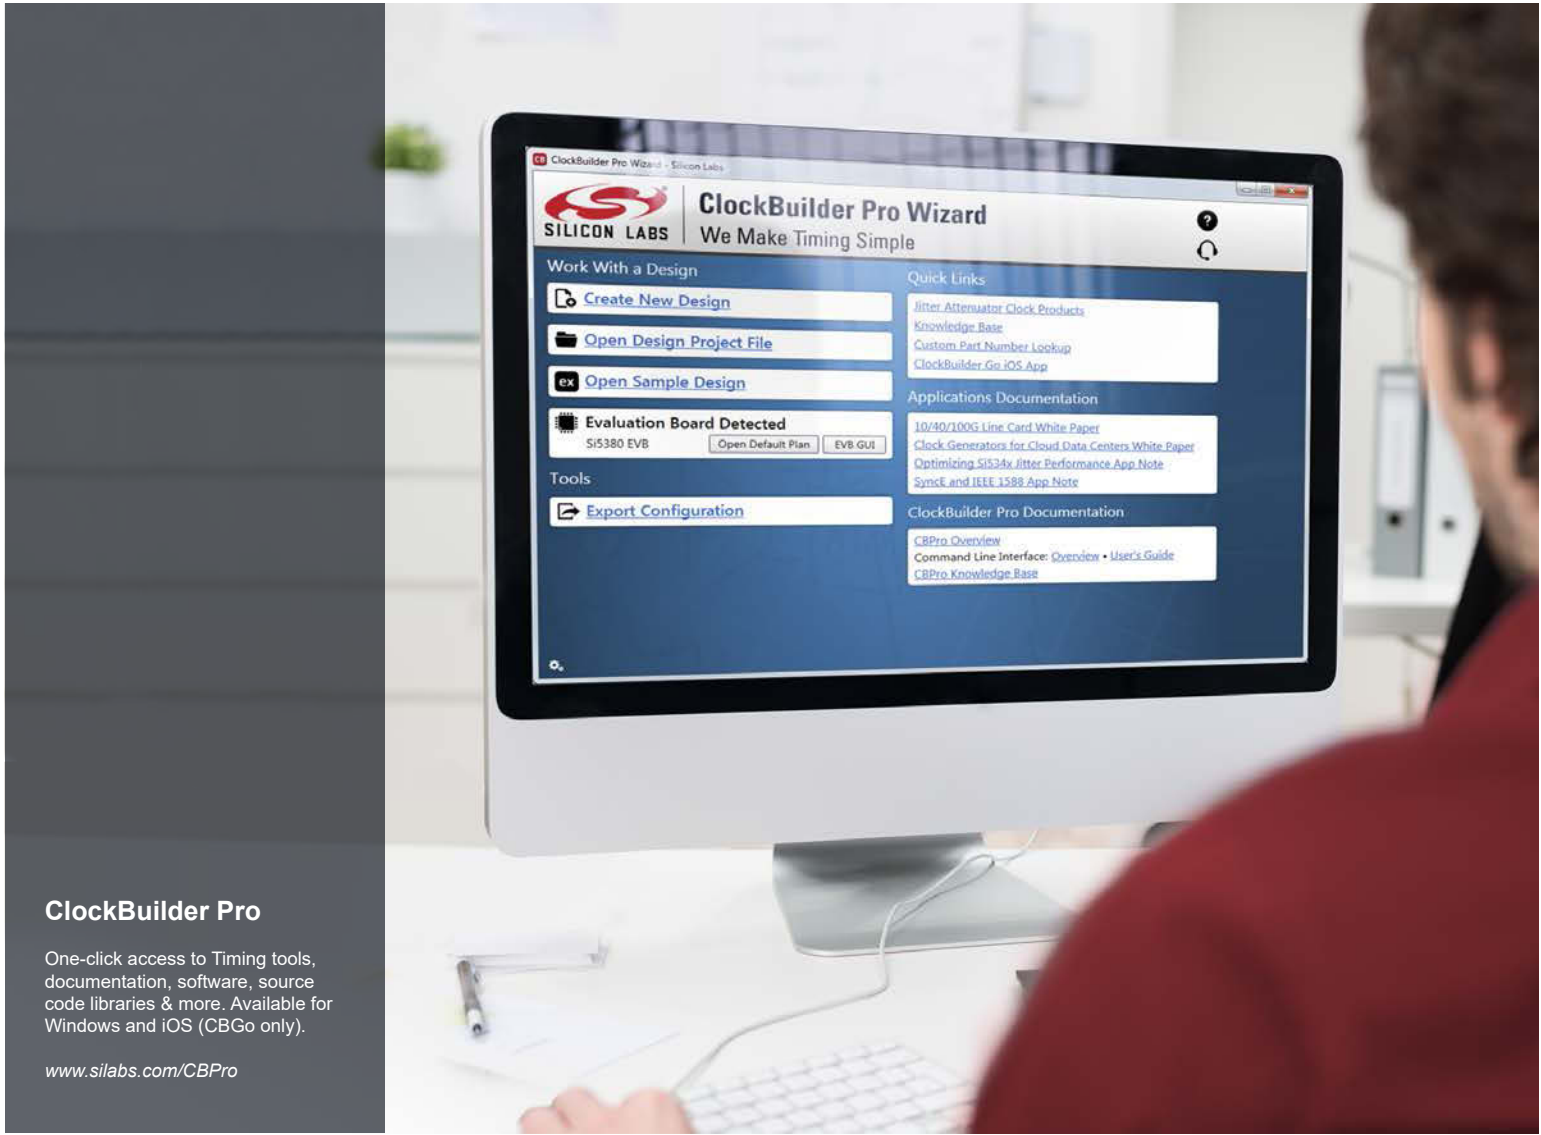

## ClockBuilder Pro

One-click access to Timing tools, documentation, software, source code libraries & more. Available for Windows and iOS (CBGo only).

[www.silabs.com/CBPro](http://www.silabs.com/CBPro)



Timing Portfolio  
[www.silabs.com/timing](http://www.silabs.com/timing)



SW/HW  
[www.silabs.com/CBPro](http://www.silabs.com/CBPro)



Quality  
[www.silabs.com/quality](http://www.silabs.com/quality)



Support and Community  
[community.silabs.com](http://community.silabs.com)

### Disclaimer

Silicon Labs intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Labs products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Labs reserves the right to make changes without further notice to the product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Without prior notification, Silicon Labs may update product firmware during the manufacturing process for security or reliability reasons. Such changes will not alter the specifications or the performance of the product. Silicon Labs shall have no liability for the consequences of use of the information supplied in this document. This document does not imply or expressly grant any license to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any FDA Class III devices, applications for which FDA premarket approval is required, or Life Support Systems without the specific written consent of Silicon Labs. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Labs products are not designed or authorized for military applications. Silicon Labs products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons. Silicon Labs disclaims all express and implied warranties and shall not be responsible or liable for any injuries or damages related to use of a Silicon Labs product in such unauthorized applications.

### Trademark Information

Silicon Laboratories Inc.®, Silicon Laboratories®, Silicon Labs®, SiLabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga Logo®, ClockBuilder®, CMEMS®, DSPLL®, EFM®, EFM32®, EFR®, Ember®, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZRadio®, EZRadioPRO®, Gecko®, Gecko OS, Gecko OS Studio, ISOModem®, Precision32®, ProSLIC®, Simplicity Studio®, SiPHY®, Telegesis, the Telegesis Logo®, USBXpress®, Zentri, the Zentri logo and Zentri DMS, Z-Wave®, and others are trademarks or registered trademarks of Silicon Labs. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All other products or brand names mentioned herein are trademarks of their respective holders.

